


USER Y813BT Label

MANUAL



Printer

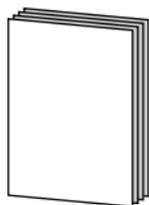


Labels*25




User Manual



USB Cable

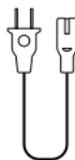

Power Cord

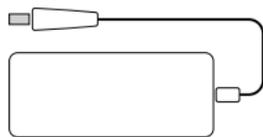

Power Adapter



USB-C Adapter



USB Flash Drive

CONTENTS

Set Up the Printer	1
Connect via Smartphone App	3
Connect to Computer via USB (MacOS/Windows/ChromeOS)	6
Connect via Bluetooth (Windows Only)	10
FCC Statement	13
Safety Notices	14

PRINTER FEATURES


Feed Button
and Status Light

Cover Button

Power
Switch

USB
Connector


DC Power
Connector

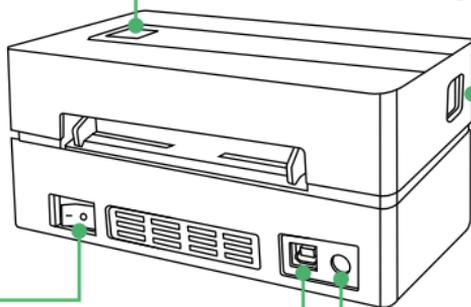


01

Set Up the Printer


Connect the power cord to the adapter and the printer. Plug the other end into a wall outlet.

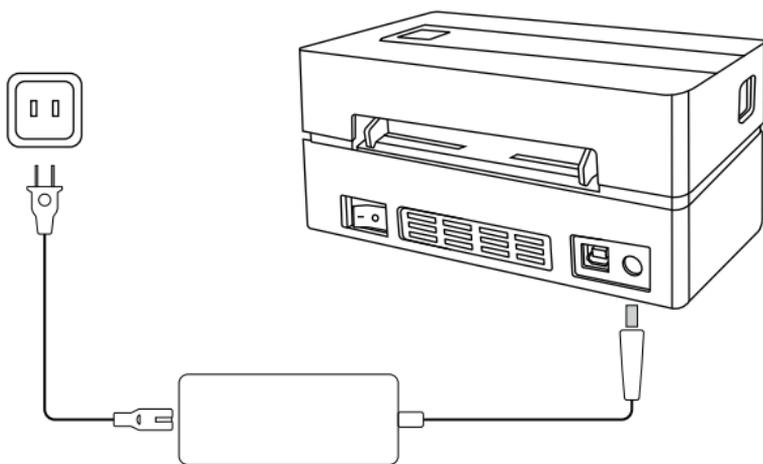

Then turn on the power.

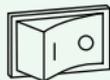


Power Off

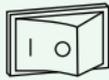



Power On

Loading Paper Options

A: Insert the label into the back of the printer until it auto-feeds into the printer.

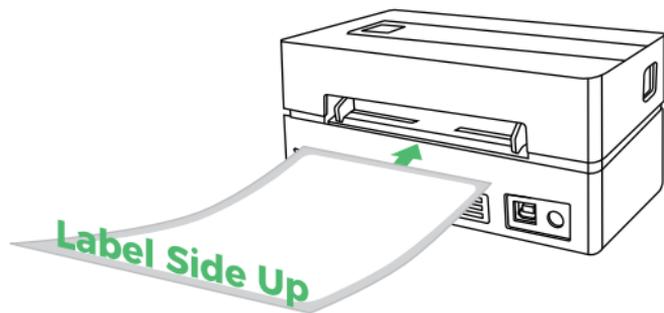

B: Open the printer cover; adjust the slot width; insert the label to the back side of the printer.

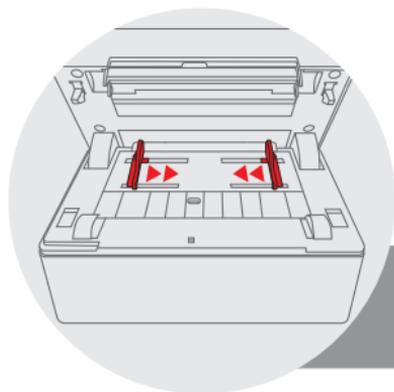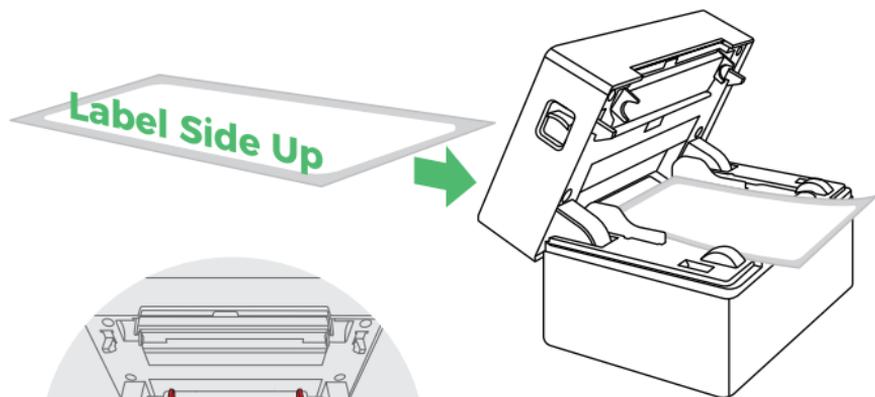

Adjust via label width guide highlighted in **RED**.


02

Connect via Smartphone App



Download the App **FlashLabel Pro**




Turn on Bluetooth.

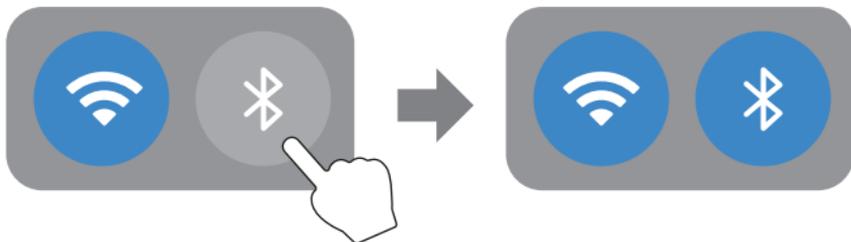


Connect the printer via Bluetooth in the FlashLabel Pro App.

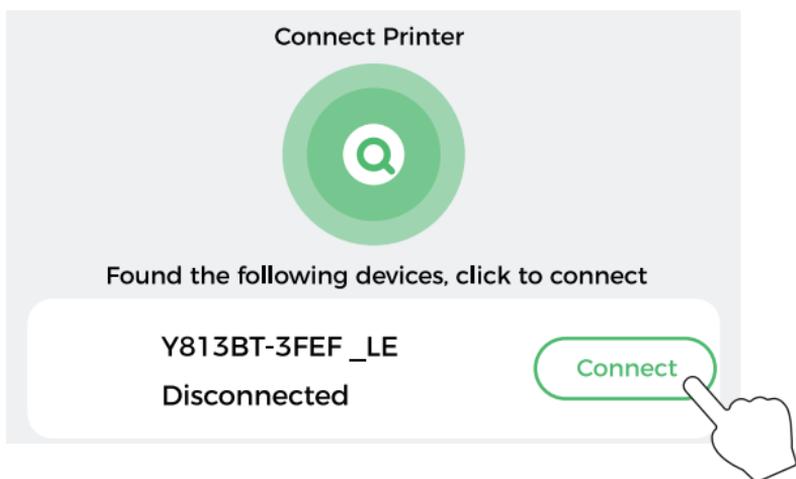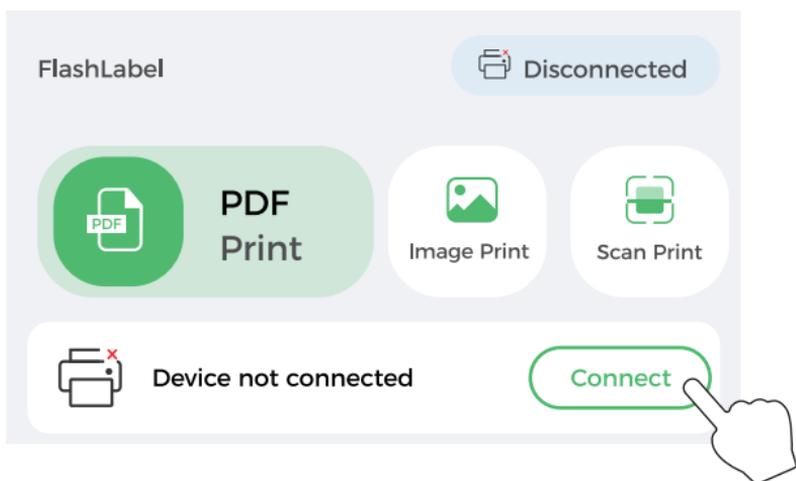

The printer is successfully connected.

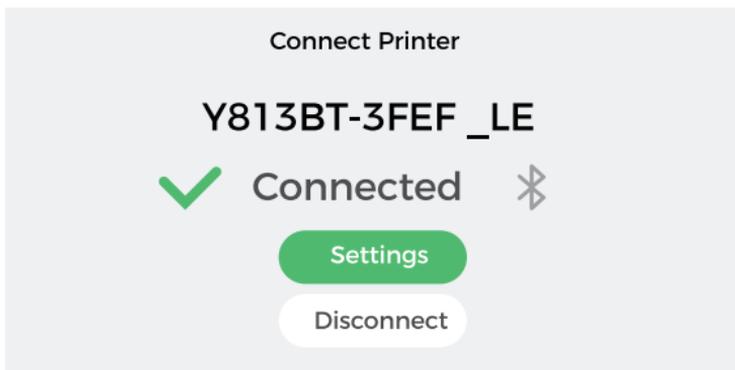

Tap  to set page size, then Confirm to print.

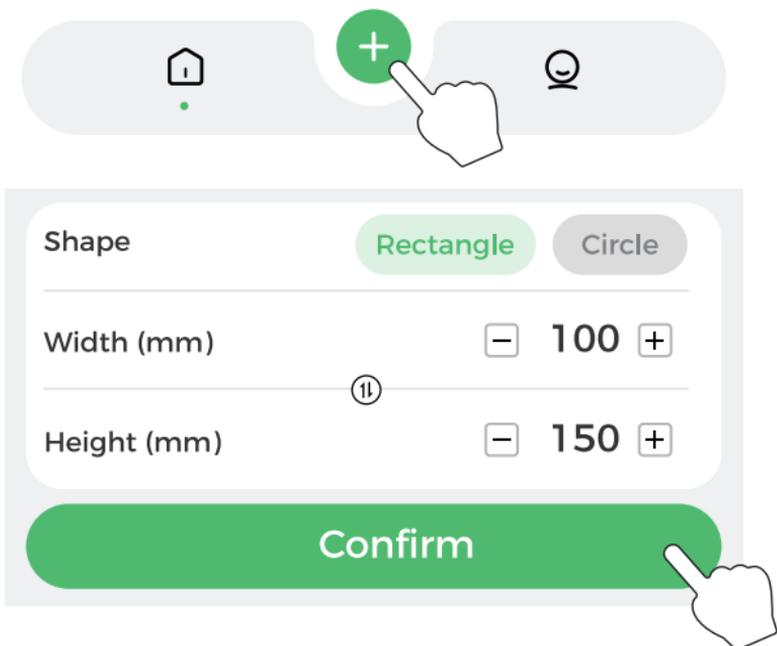


* Standard shipping label size: 4×6 inches (100 mm × 150 mm).

03


Connect to Computer via USB

(MacOS/Windows/ChromeOS)


Connect the power cord to the adapter and the printer. Plug the other end into a wall outlet.

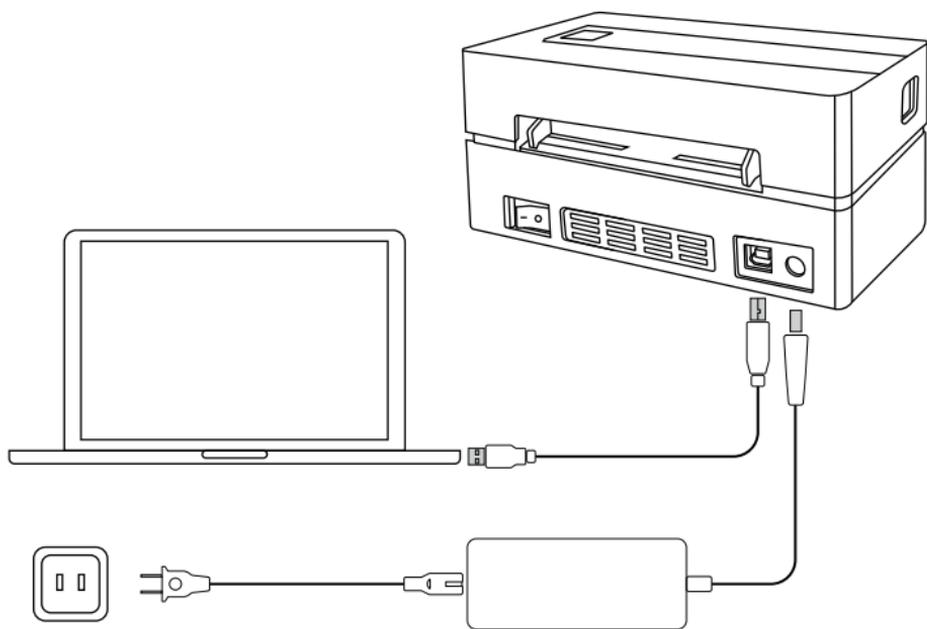

Then turn on the power.

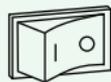


Power Off

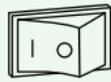

Power On

Download the **Y813 driver** from
<https://www.pixmate.com/driver/y813>
or install it via the included USB flash drive.

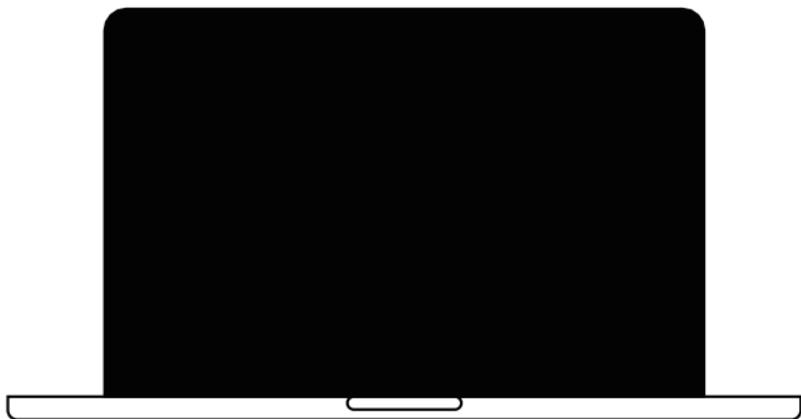

Driver for Windows




Driver for macOS




Driver for ChromeOS

Double-click the downloaded file to install the driver.

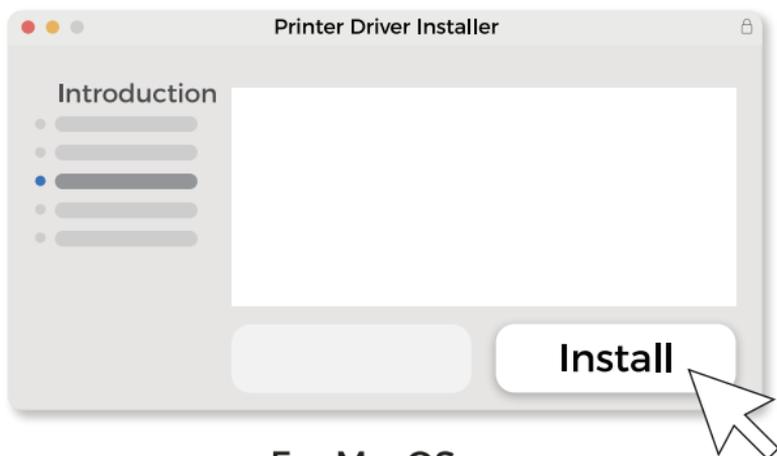


For MacOS

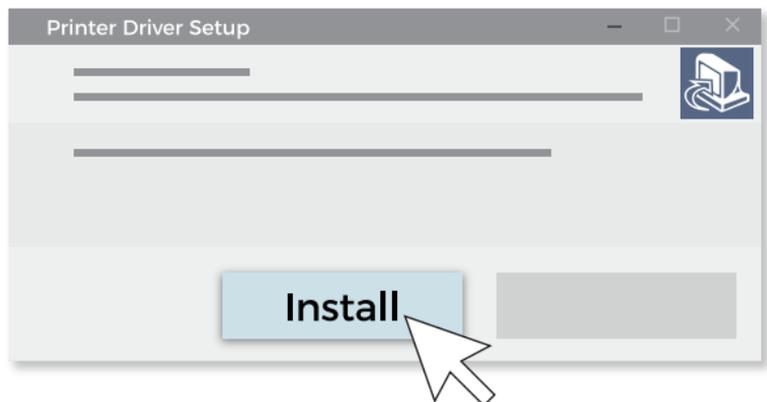


For Windows

Select "USB", then click "Next" to continue.

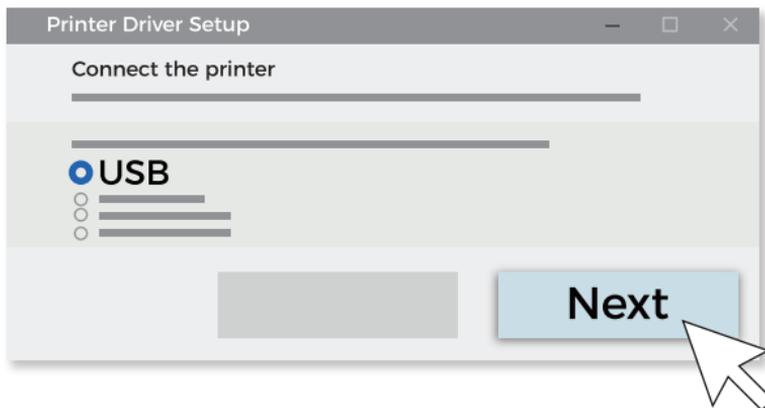

Open the file to be printed, click the Print button, and select "Y813" on the Print preview page.

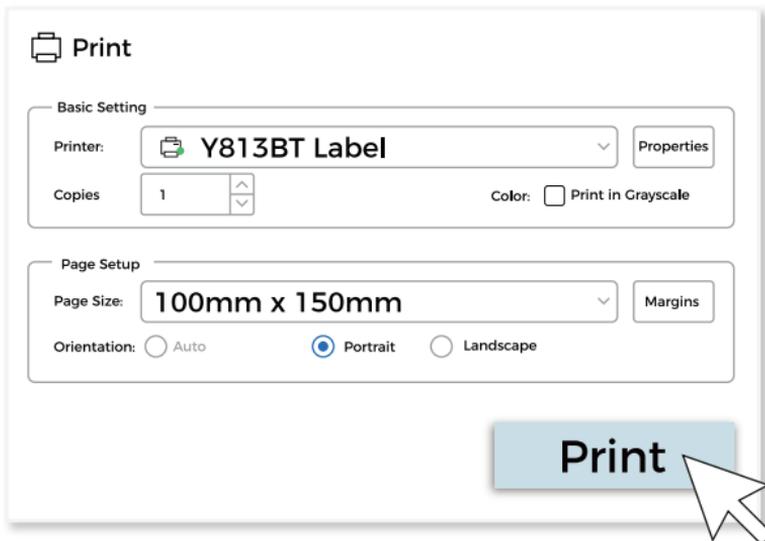


* **Note:** Go to the **Page Setup** tab and select the correct **Paper Size** from the drop-down menu. For shipping labels, the standard size is usually **4×6 inches (100 mm × 150 mm)**.

04

Connect via Bluetooth


(Windows Only)

Turn on the computer's Bluetooth in the system settings.

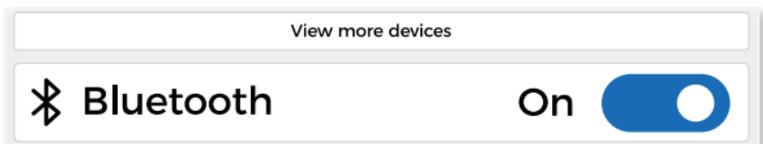


Download the **Y813 driver** from <https://www.pixmate.com/driver/y813> or install it via the included USB flash drive.


Double-click the downloaded file to install the driver.

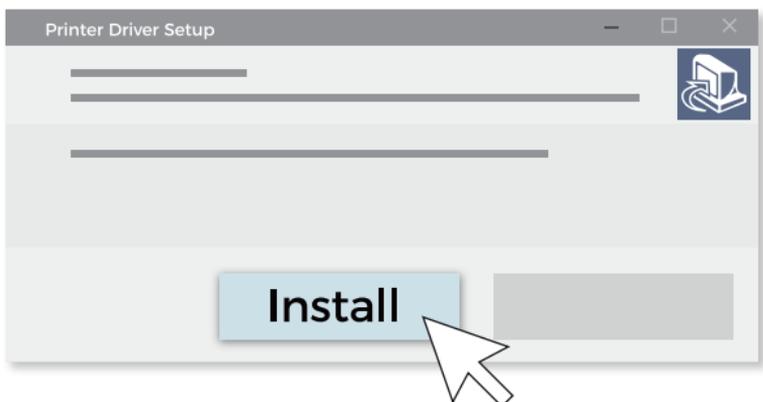


Select "Bluetooth", then click "Next" to continue.

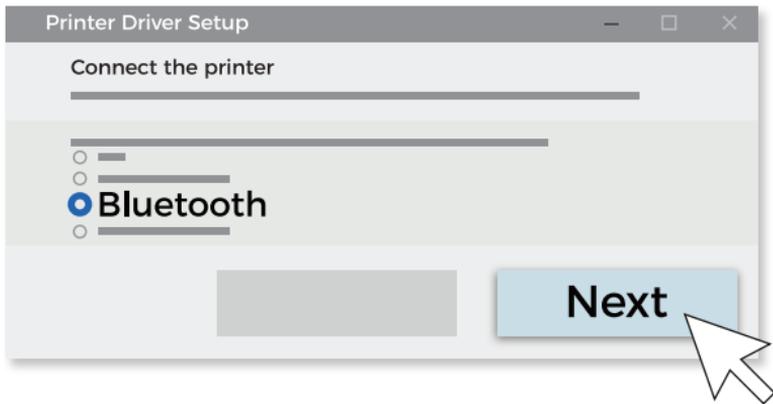

Select "Y813BT Label", then click "Next".

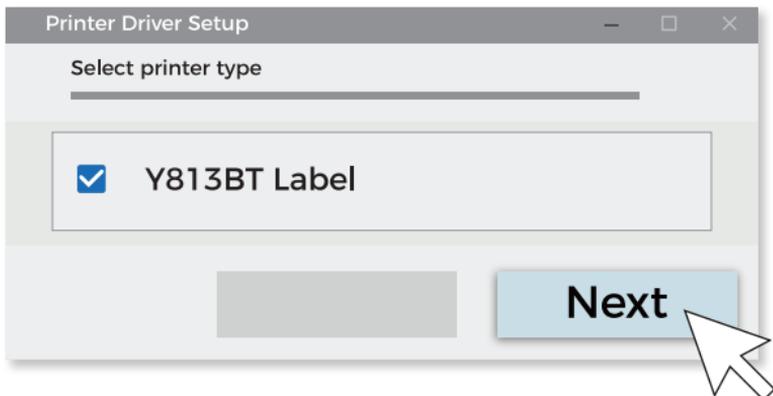

Open the file to be printed, click the Print button, and select "Y813" on the Print preview page.

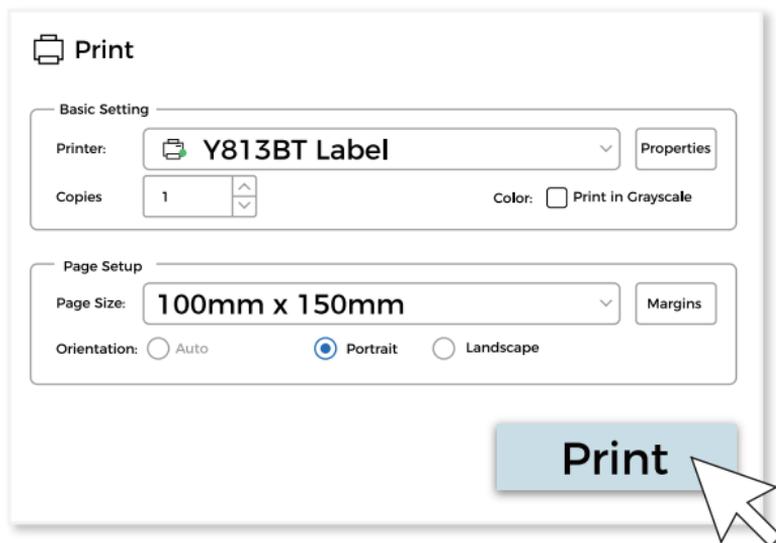

* **Note:** Go to the **Page Setup** tab and select the correct **Paper Size** from the drop-down menu. For shipping labels, the standard size is usually **4×6 inches (100 mm × 150 mm)**.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

1. Use only approved accessories to ensure proper operation.
2. Do not disassemble or attempt to repair the unit yourself.
3. Do not use the printer if you notice any signs of malfunction that could cause electric shock or fire.
4. Keep the printer away from water, fire, or other sources that may damage the internal components.
5. Do not touch the print head immediately after use, as it may be hot.
6. Keep the printer out of reach of children to prevent accidents.
7. Unplug the printer if it will not be used for an extended period.

