



ChromeBook(ChromeOS) via USB cable


Supported model: C80

1. Press and hold the powerkey for 2s to Turn ON printer.
2. Connect printer to your computer via USB Cable.

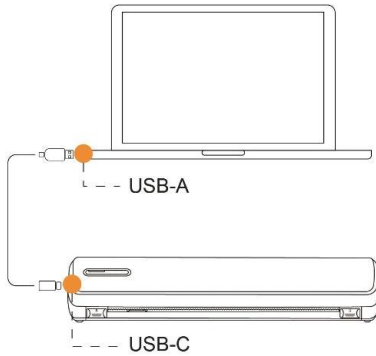


3. Install FlashLabel Printer driver on ChromeBook(ChromeOS):
4. Search and add "Flashlabel" extension in the Chrome Web Store.

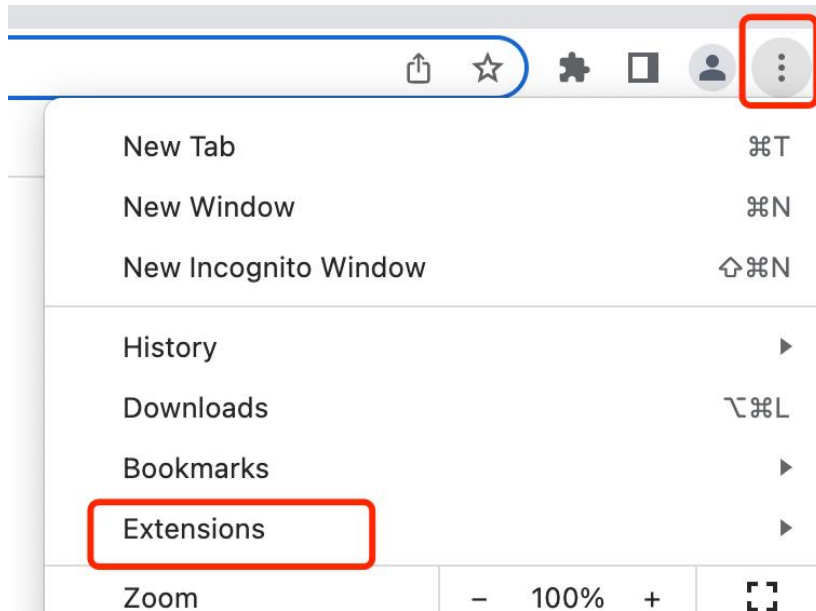


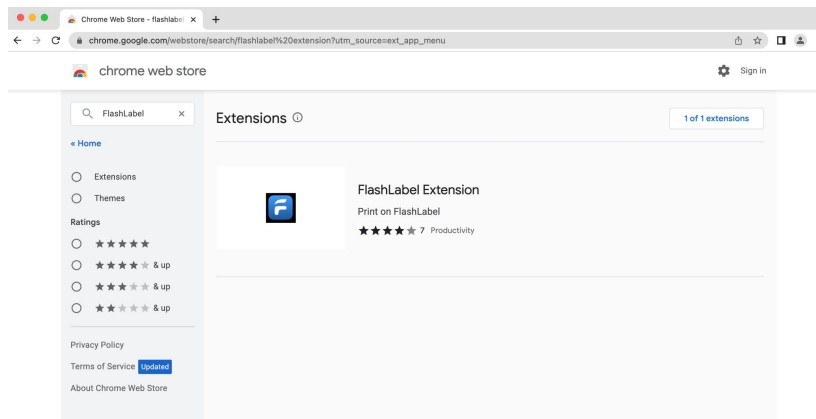

5. Click the extension icon-> Choose"FlashLabel" ->Click "Add" -> Choose"Y468"-> Click "Connect".

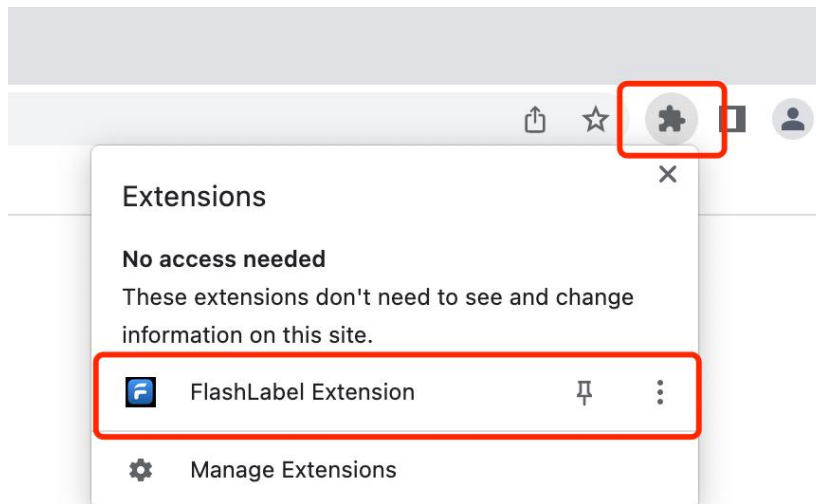

Tips: You can change Speed,Density,Resolution in "Setting Printer" menu.

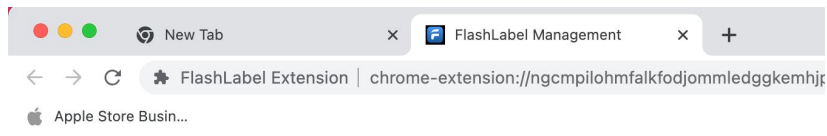

Add FlashLabel Printer



Setting Printer

1. Insert printer and click Add button to enter the device list, then Select the printer

2. Open the file to print

3. Please do not close this web page. After closing, you will not be able to select flashprinter.

4. After the printer is added successfully, if you close this web page accidentally, you can reopen this web page without adding a printer again

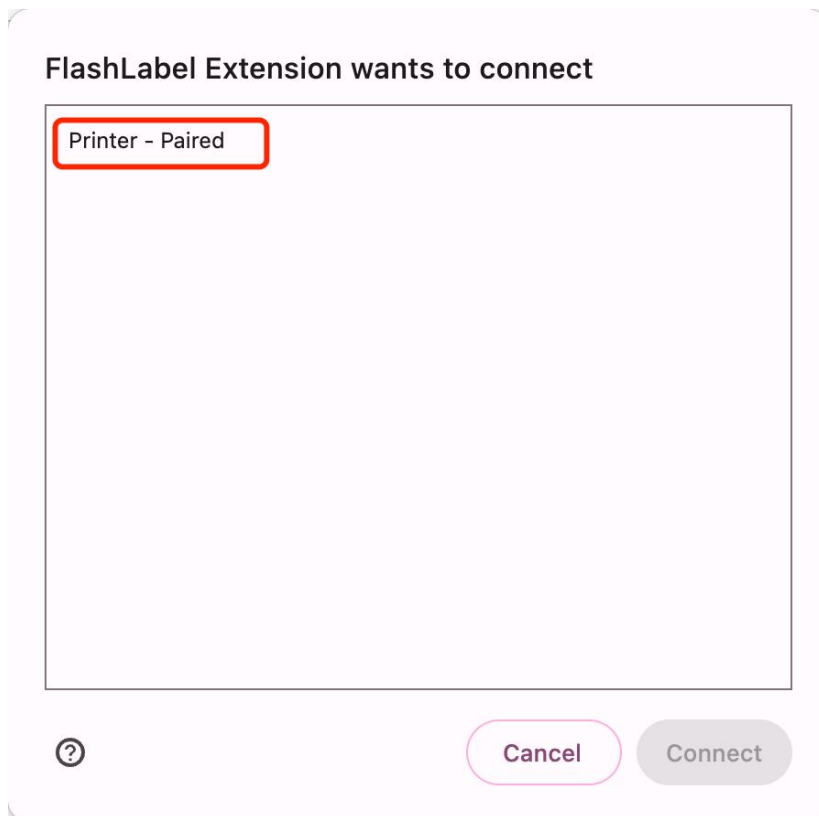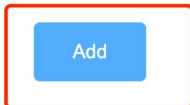

5. Open a PDF file with Chrome Browser-> Choose "FlashLabel" and your paper size-> Click "Print".

