

# Install Driver on Linux via USB cable



Supported model:C80

**NOTE:** Applies to architecture amd64


If the device is an aarch64 RaspberryPi device, please click [here](#).



It takes a few minutes to show how to install FlashLabel Printer driver on raspberrypi via USB:



1. Please ensure printer is Turn OFF.
2. Connect printer to your computer via USB Cable.
3. Attach the power cable to power adapter, then connect the power cable to the printer, and plug it into the socket.
4. Turn ON printer.
5. Download Printer driver
6. run "A4\_PI\_Driver\_Ver1.2.1.run", follow below steps to install printer driver.

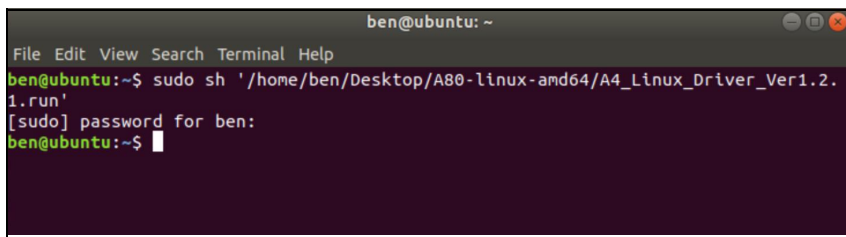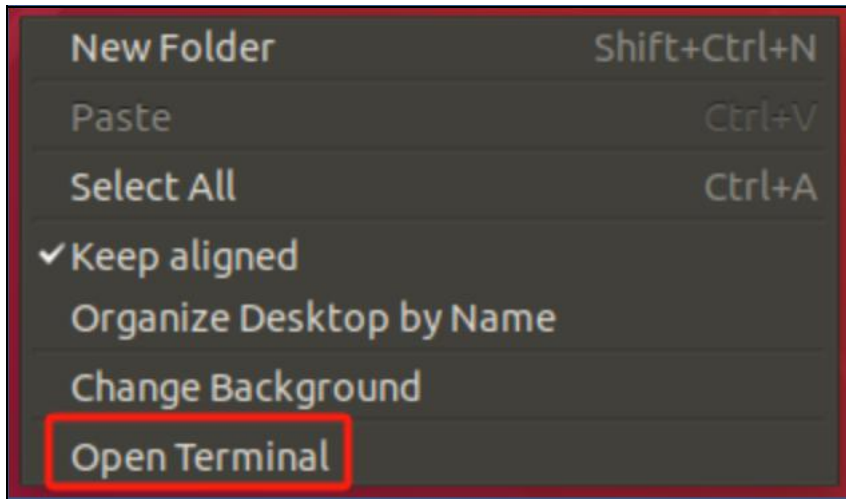

7. Follow below steps to Add printer.

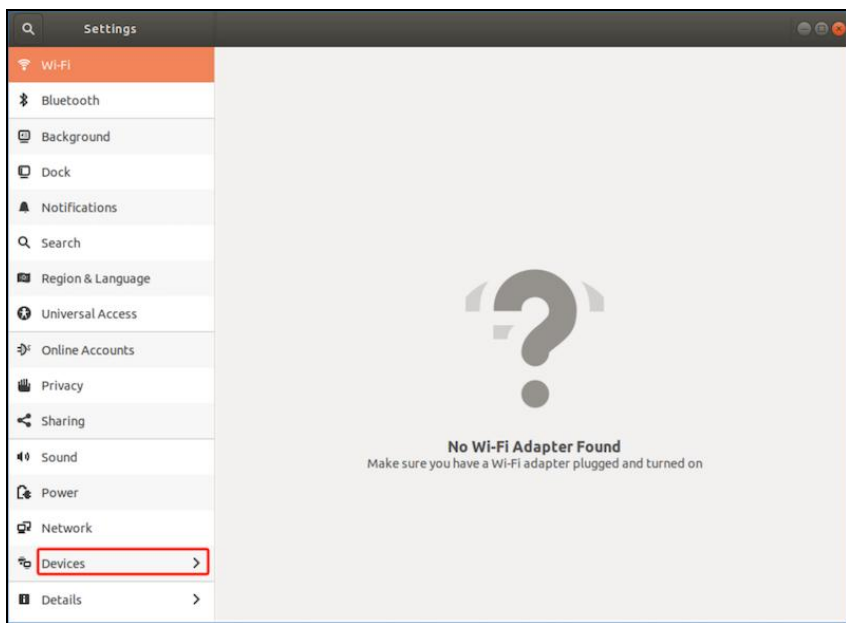

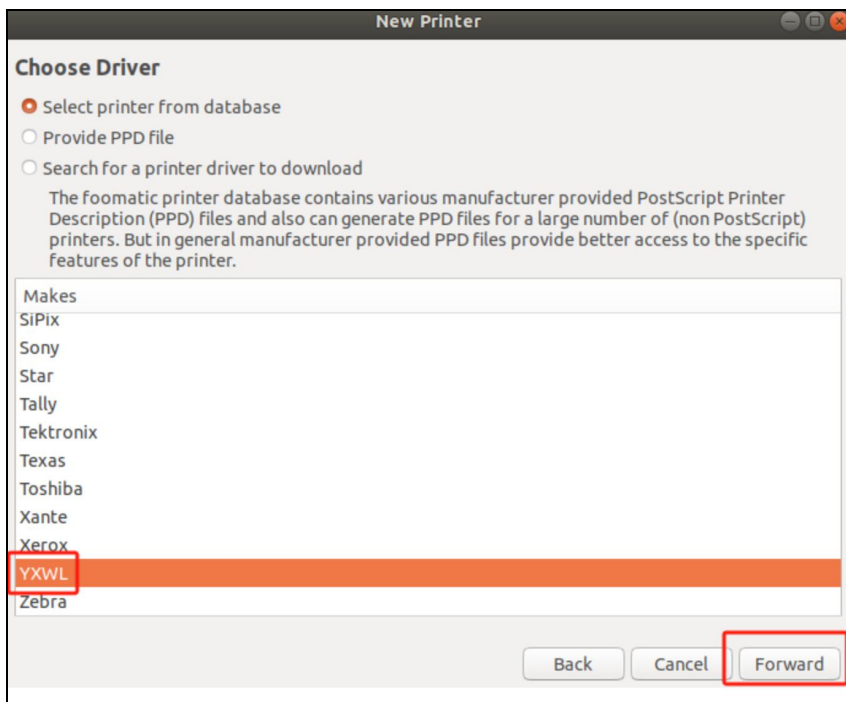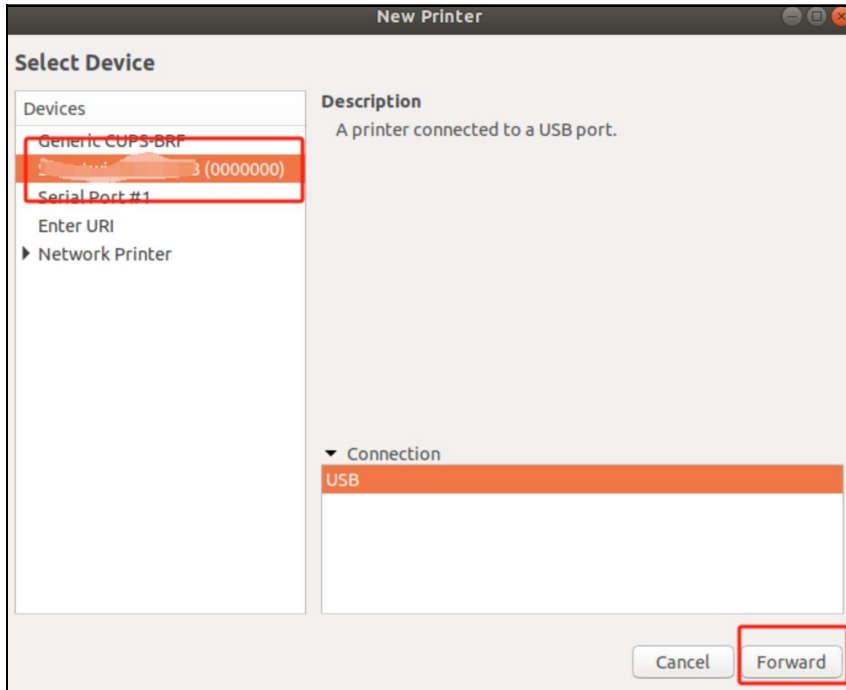

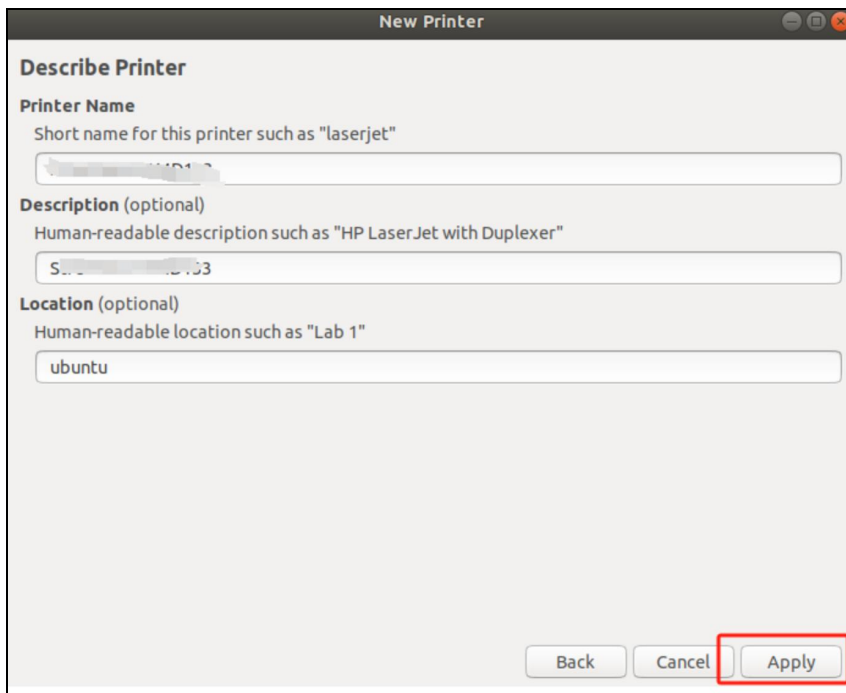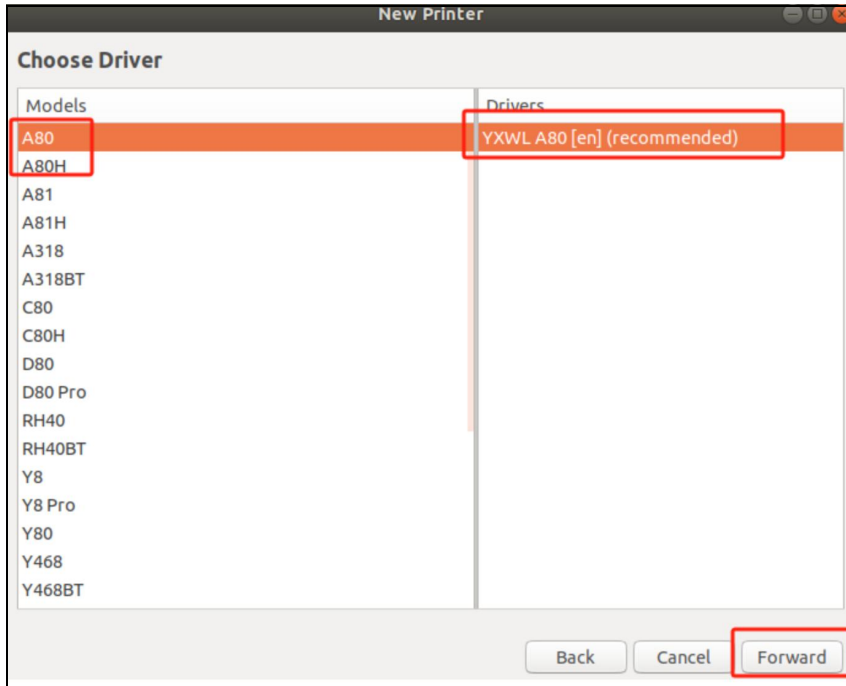

8. Enjoy your printing with FlashLabel Printer!