Setup Instruction
For Phone

Package Contents

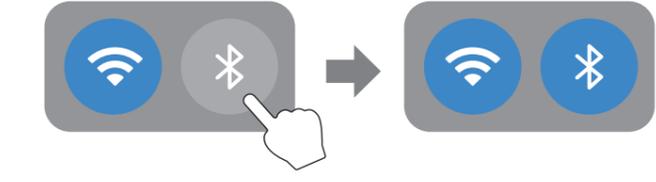
Printer x 1

USB cable x 1   Folded Paper x 10   Tattoo Transfer Paper x 10   Setup Instruction x 1
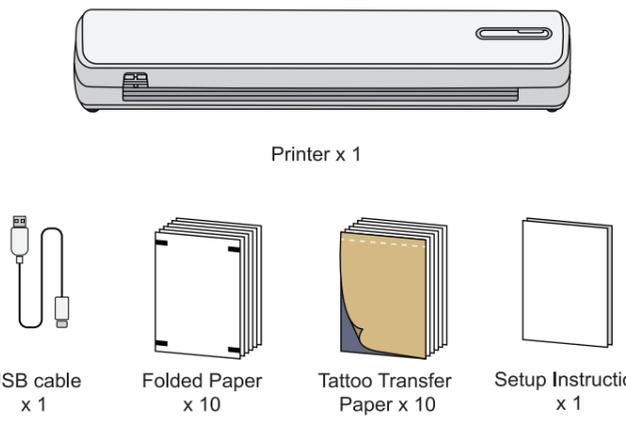
App Connection

Download the App SharpFox.

App Store
Google Play

SharpFox

Press and hold the power key for 2s to turn on the C80 Printer.

Power Key

❶

Turn on Bluetooth.

Press and hold the power key for 2s to turn on the C80 Printer.

Power Key

❷
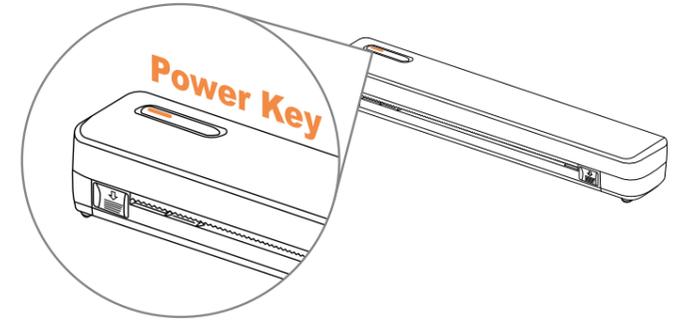
Connect the printer via Bluetooth in the SharpFox App.

A4 Printer
Connect Device →

C80_65A3_LE   **Connect Device**

C80_65A3_LE ✓
Connect Device →
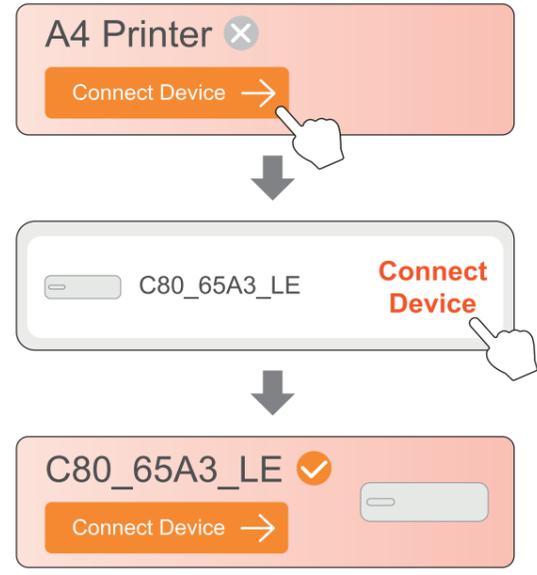
Select paper type and width in the App.
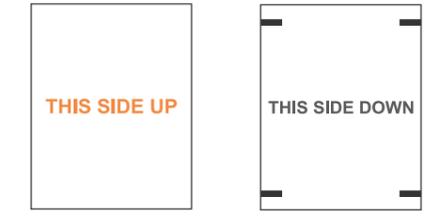
❸

Paper Installation
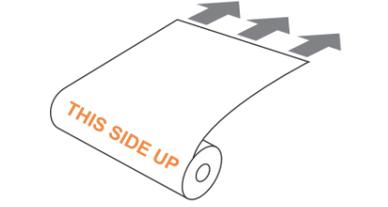
Folded Paper

THIS SIDE UP   THIS SIDE DOWN

⚠ Make sure the printing side of the folded paper.

THIS SIDE UP

Insert the paper parallel to the printer entrance; it will be gently sucked in after 2s.

❹
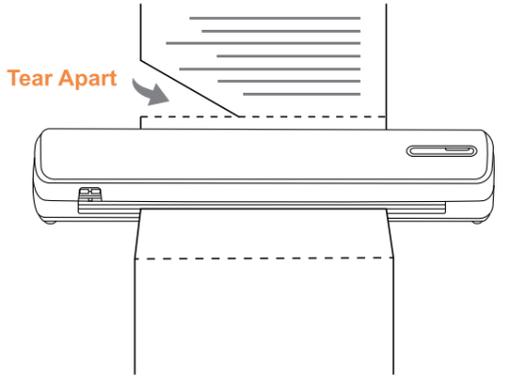

Rolled Paper

THIS SIDE UP

⚠ Make sure the thermal paper in the correct direction.

THIS SIDE UP

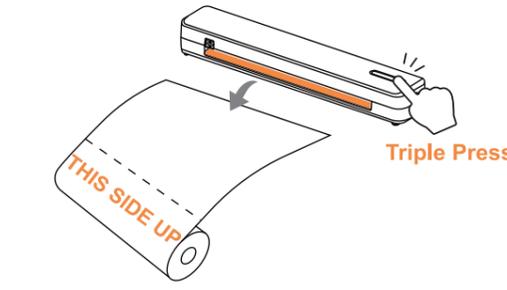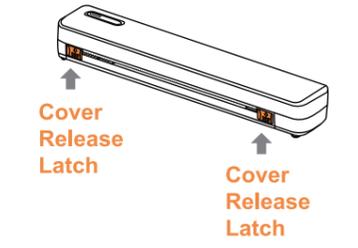Insert the paper parallel to the printer entrance; it will be gently sucked in after 2s.

❺

Cut Paper

Tear Apart

Tear off the printed paper after printing.

❻

Retract Paper

THIS SIDE UP   Triple Press

To retract the paper, triple-press the power key. Or press both cover release latches to open.
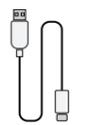
Cover Release Latch   Cover Release Latch
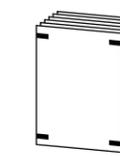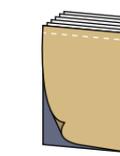
❼
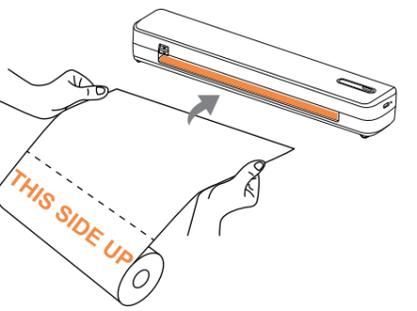
Setup Instruction
For Computer

Package Contents

Printer x 1

USB cable x 1

Folded Paper x 10

Tattoo Transfer Paper x 10
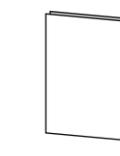
Setup Instruction x 1

PC Connection 🖥

1

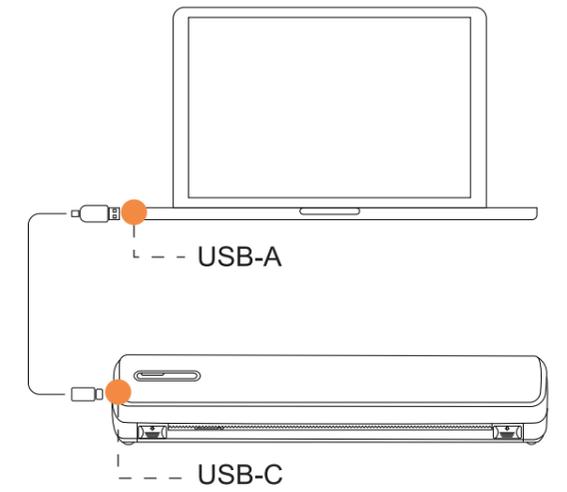Visit **https://www.pixmate.com/driver/c80**
Download **C80 Printer Driver**

🔍 www.pixmate.com/driver/c80

Press and hold the power key for 2s to turn on the C80 Printer.

Power Key

2
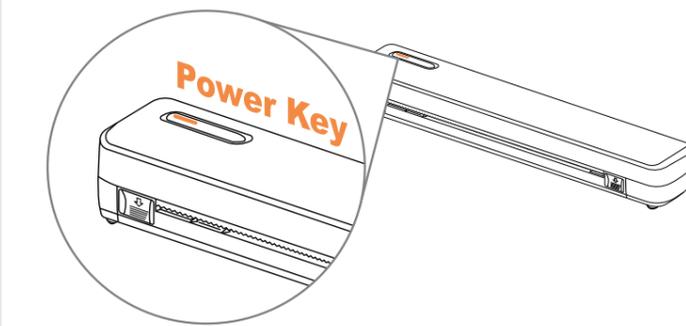
Connect the printer to computer using the USB cable.

USB-A

USB-C

3

Double-click the downloaded file to install the driver.

Install A4 Printer Driver Installer

Install

For MacOS

C80 Printer Driver Setup

Install

For Windows

Paper Installation 📄

Folded Paper

4

THIS SIDE UP   THIS SIDE DOWN
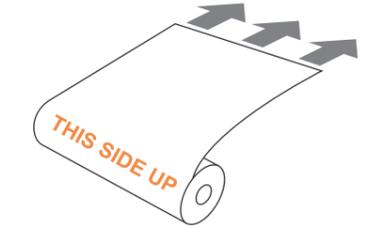
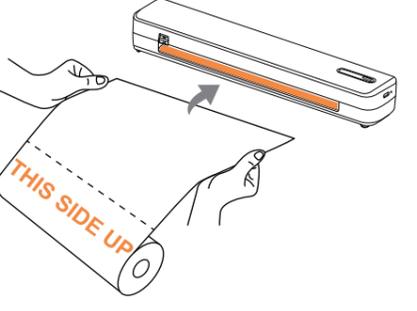⚠ Make sure the printing side of the folded paper.

THIS SIDE UP

Insert the paper parallel to the printer entrance; it will be gently sucked in after 2s.
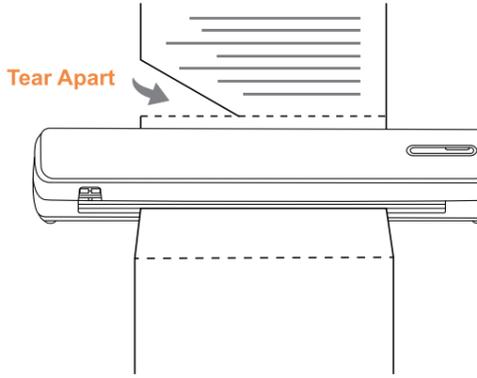
Rolled Paper

5

THIS SIDE UP

⚠ Make sure the thermal paper in the correct direction.

THIS SIDE UP

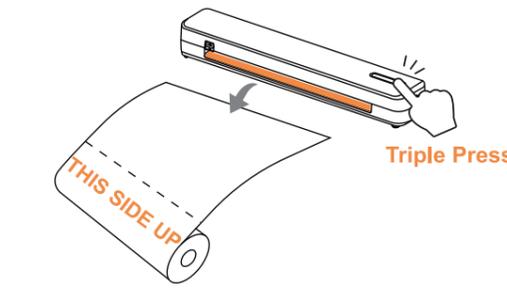Insert the paper parallel to the printer entrance; it will be gently sucked in after 2s.
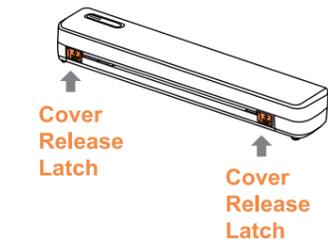
Cut Paper

6

Tear Apart

Tear off the printed paper after printing.

Retract Paper

7

Triple Press

THIS SIDE UP

To retract the paper, triple-press the power key. Or press both cover release latches to open.

Cover Release Latch   Cover Release Latch