Install Driver on Windows via Bluetooth

Supported model list: Y813

It takes a few minutes to show how to install FlashLabel Printer driver on windows via Bluetooth:

1. Please ensure printer is Turn OFF.

2. Connect the power cable to the printer, and plug it into the socket.

3. Turn ON Printer and Bluetooth

4. Download Printer driver

5.Unzip download file and run "Win-Driver-Latest-v1.3.0.exe", follow below steps to finish installtion.

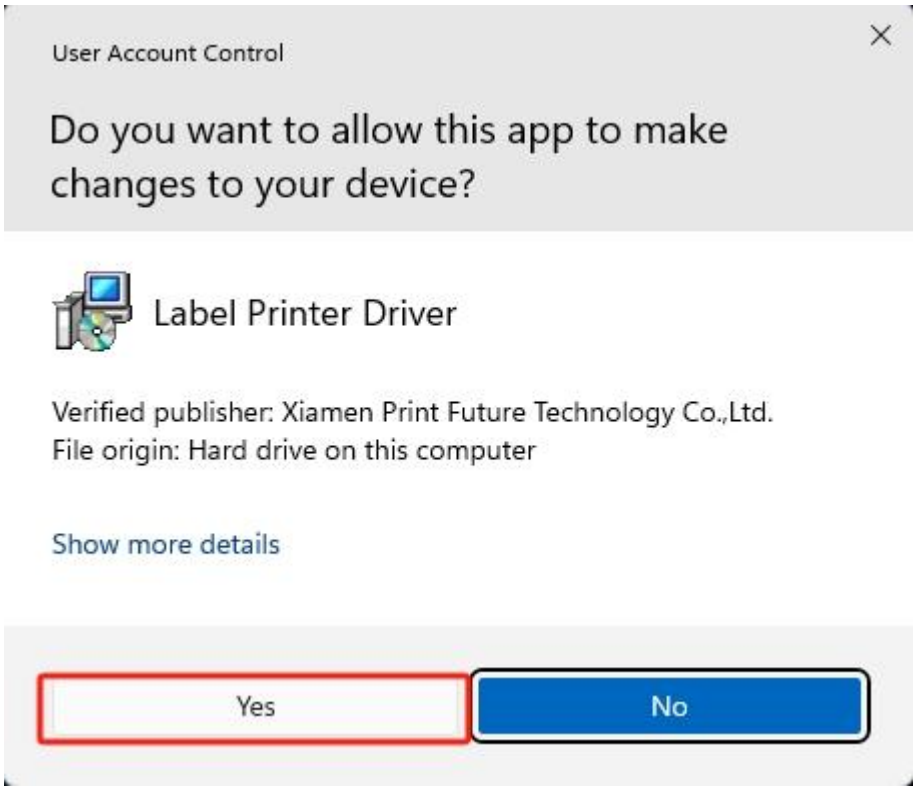

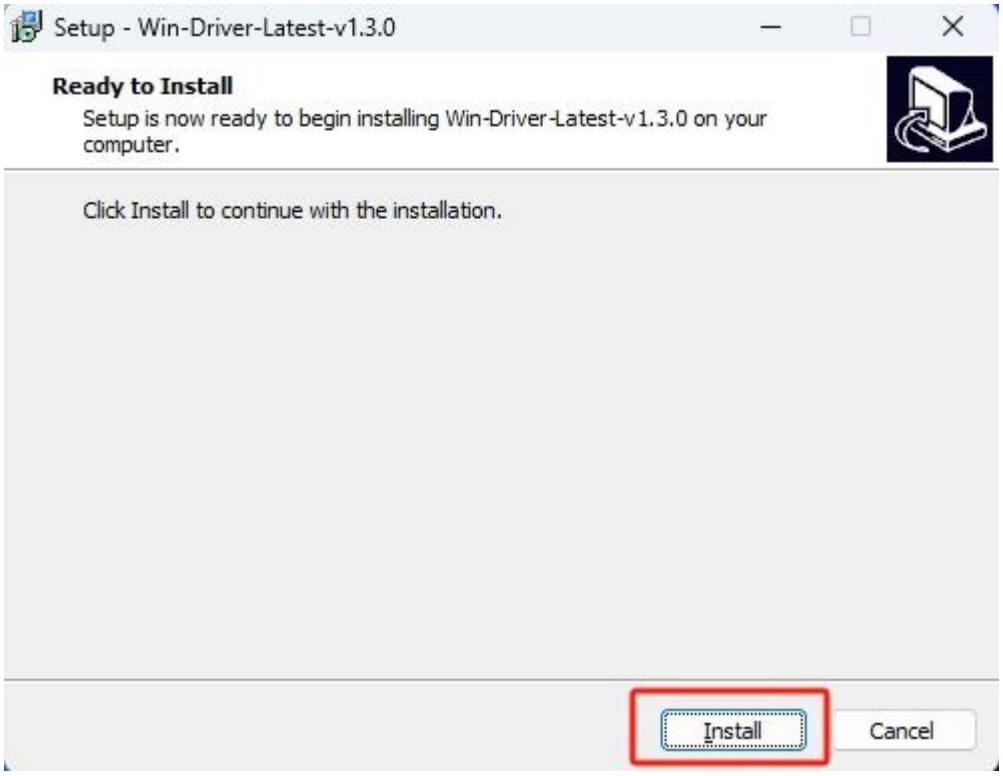
Setup - Win-Driver-Latest-v1.3.0
Ready to Install
Setup is now ready to begin installing Win-Driver-Latest-v1.3.0 on your computer.
Click Install to continue with the installation.
Install
Cancel

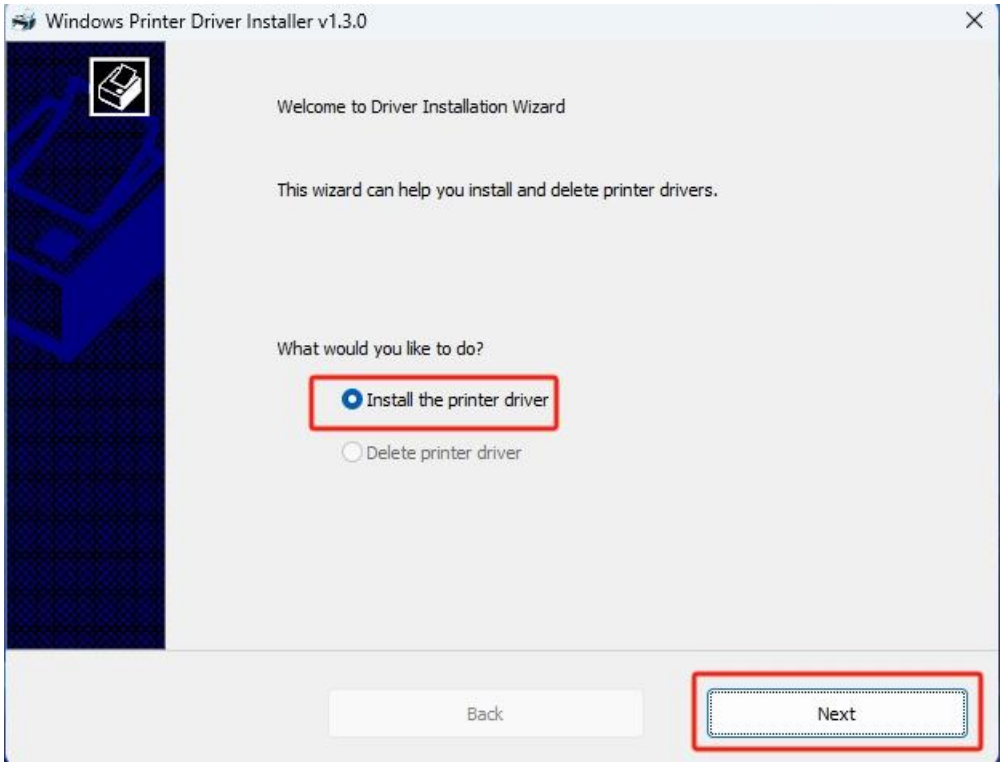
Windows Printer Driver Installer v1.3.0
Welcome to Driver Installation Wizard
This wizard can help you install and delete printer drivers.
What would you like to do?
Install the printer driver
Delete printer driver
Back
Next

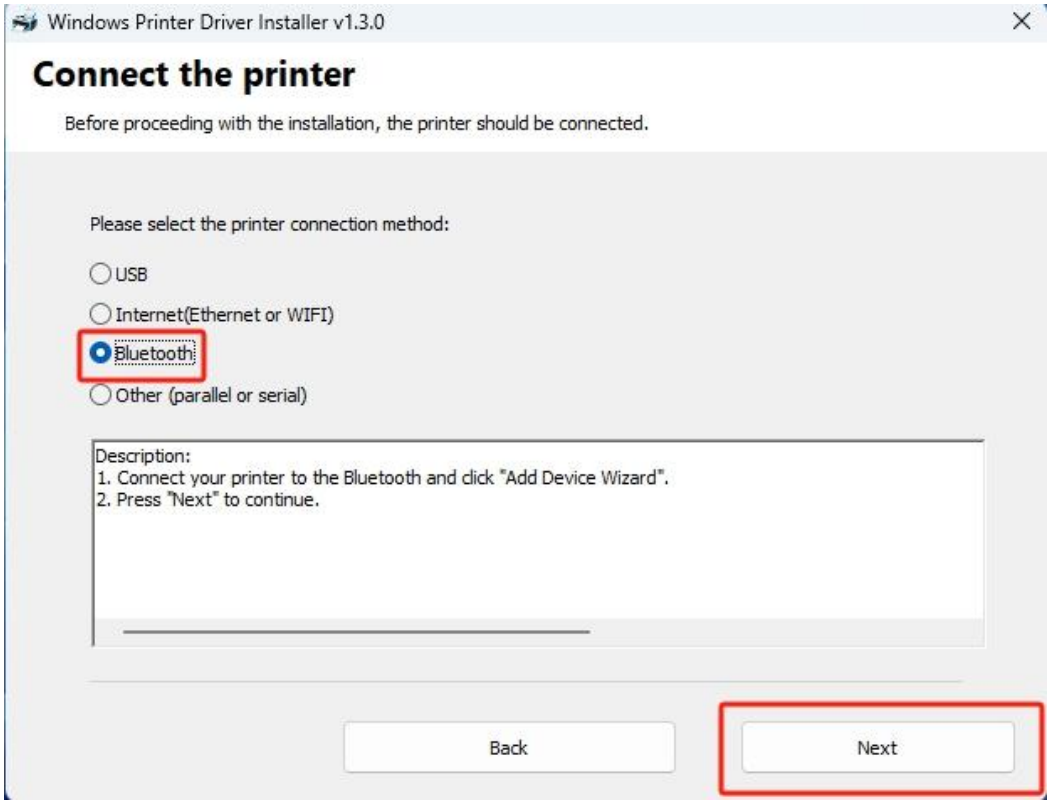
Windows Printer Driver Installer v1.3.0
Connect the printer
Before proceeding with the installation, the printer should be connected.
Please select the printer connection method:
USB
Internet(Ethernet or WIFI)
Bluetooth
Other (parallel or serial)
Description:
1. Connect your printer to the Bluetooth and click "Add Device Wizard".
2. Press "Next" to continue.
Back
Next

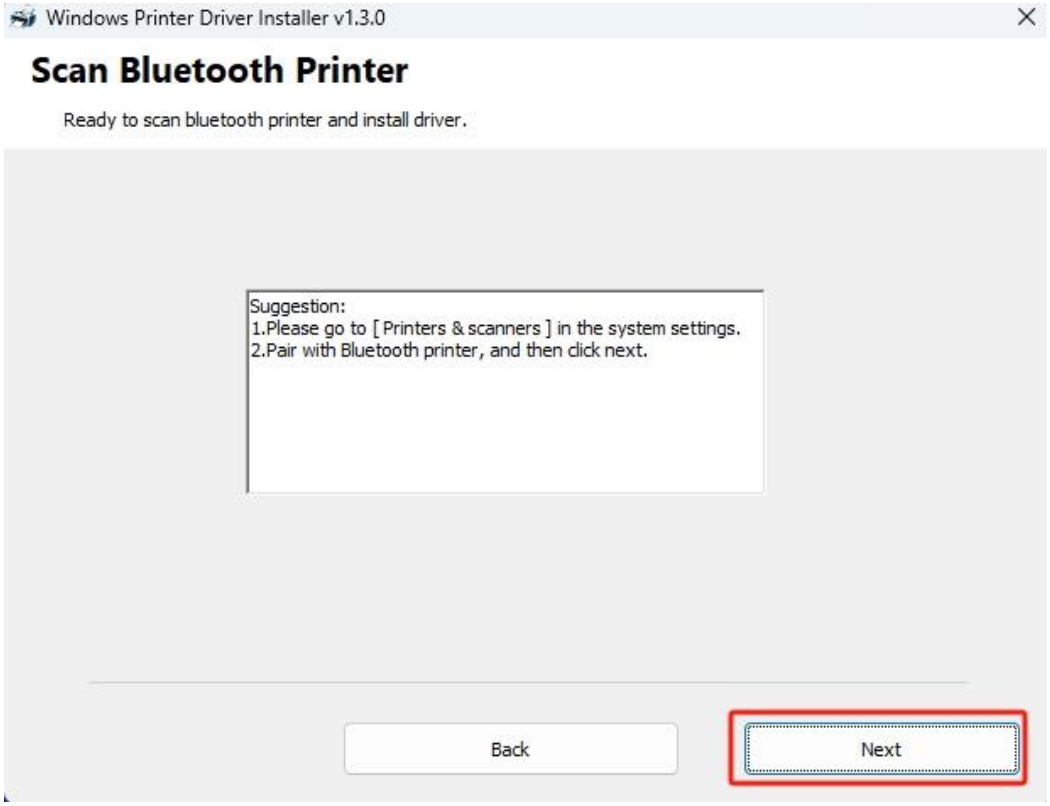
Windows Printer Driver Installer v1.3.0
Scan Bluetooth Printer
Ready to scan bluetooth printer and install driver.
Suggestion:
1.Please go to [Printers & scanners] in the system settings.
2.Pair with Bluetooth printer, and then click next.
Back
Next

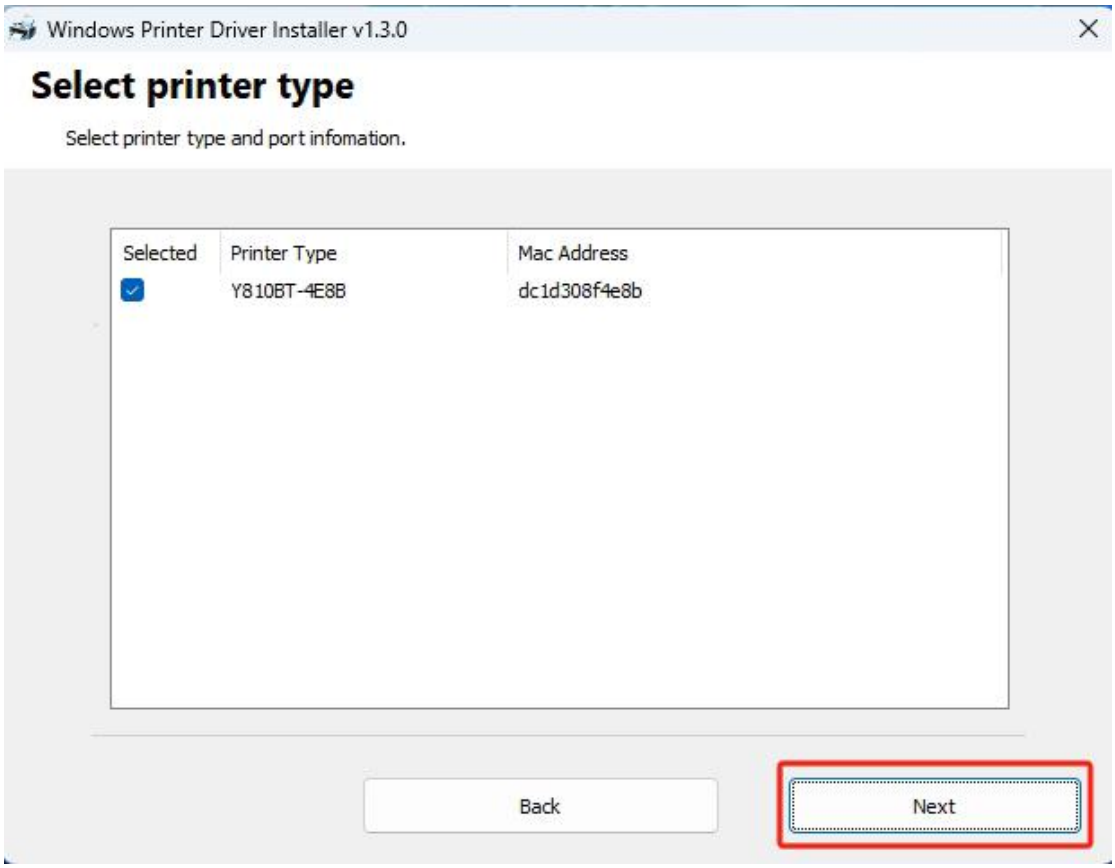

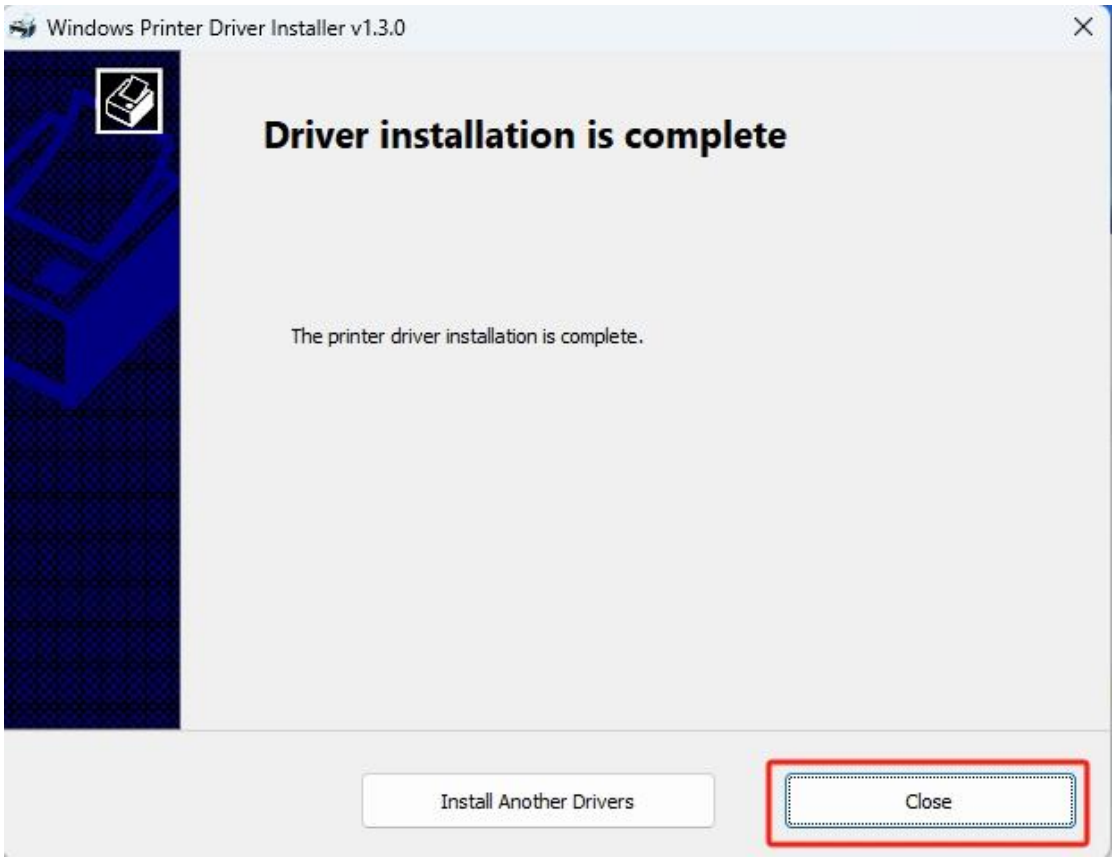

Friendly Tips: The below normal prompt wont affect your printing.

Y813BT-82B5

Driver is unavailable

Notice:

Bluetooth Printer May Show "Driver Unavailable"

When connecting your printer to a Windows device via Bluetooth, you may see a “Driver Unavailable” message in the Bluetooth settings. This is normal behavior and does not affect printing. No action is required.